

## **2006-Current Honda TRX 450R**

### Jetting recommendations

- ❑ To access the carburetor, take the seat and fuel tank off.
- ❑ Be sure to turn the fuel petcock off before taking the tank off.
- ❑ Take the carburetor off of the motor and pull it up into the open.
- ❑ These recommendations are with the Sparks Exhaust, the Air box lid off, at sea level only. If you're using this kit to tune for another manufacturer's performance products, please contact that manufacturer for additional jetting recommendations.

---

	Main jet	Needle jet / clip position	Pilot (slow jet)	Fuel screw (from closed)
<b>06TRX 450R</b>	175	Sparks / 4th	Stock	2.5 +/- .5

- ❑ Through the top of the carburetor install the Sparks Racing needle jet.
- ❑ The clip goes in the 4<sup>th</sup> position from the top.
- ❑ Take off the float bowl.
- ❑ Install the recommended main jet.
- ❑ The accelerator bypass jet goes in the bottom of the float bowl.
- ❑ Reinstall the carburetor making certain that everything is together correctly and tight.