




Six Degree Ignition Advance Key

Instructions:

Remove old woodruff key and install new one with the red portion of the key facing away from the engine. To insure proper operation, make sure the key is placed evenly into the slot on the crankshaft. It is important that one end of the key is not higher than the other. Once this is done, install the flywheel and rotate counterclockwise (to left) until it comes to a stop. Install the flywheel bolt and tighten (an impact gun is the best way to make certain that this is accomplished). You have now advanced your ignition timing six degrees and are ready to go riding! Note: The stock marks for top dead center (TDC) will no longer be accurate, be sure find the TDC through the spark plug hole.

Thank you,
Curtis Sparks Racing

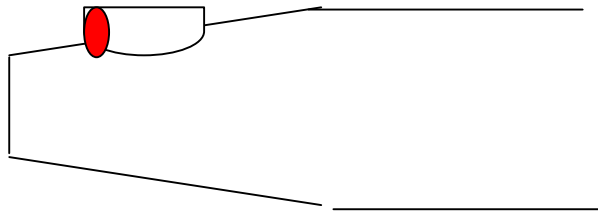

If you have any questions, please contact us at:
Curtis Sparks Racing – 11200 Pitts Avenue, Bakersfield, CA. 93306
(661) 872-4343 www.sparksracing.com